

Berkshire Wall Unit Assembly Instructions


3/17/2011

ZG-B1100 - Super 60 TV Console

ZG-B3201 - Left Bookcase Pier

ZG-B3202 - Right Bookcase Pier

ZG-B3203 - Cabinet Bridge

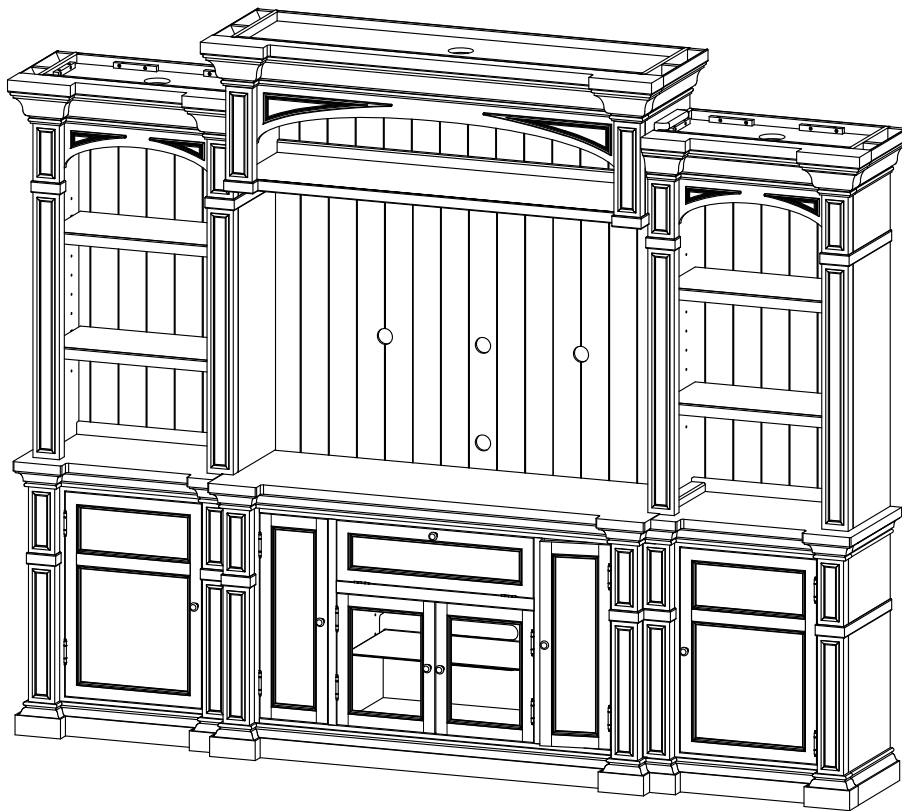

Thank you for choosing Legends Furniture!


Berkshire Wall Unit Assembly Instructions

ZG-B1100 - Super 60 TV Console

ZG-B3201 - Left Bookcase Pier



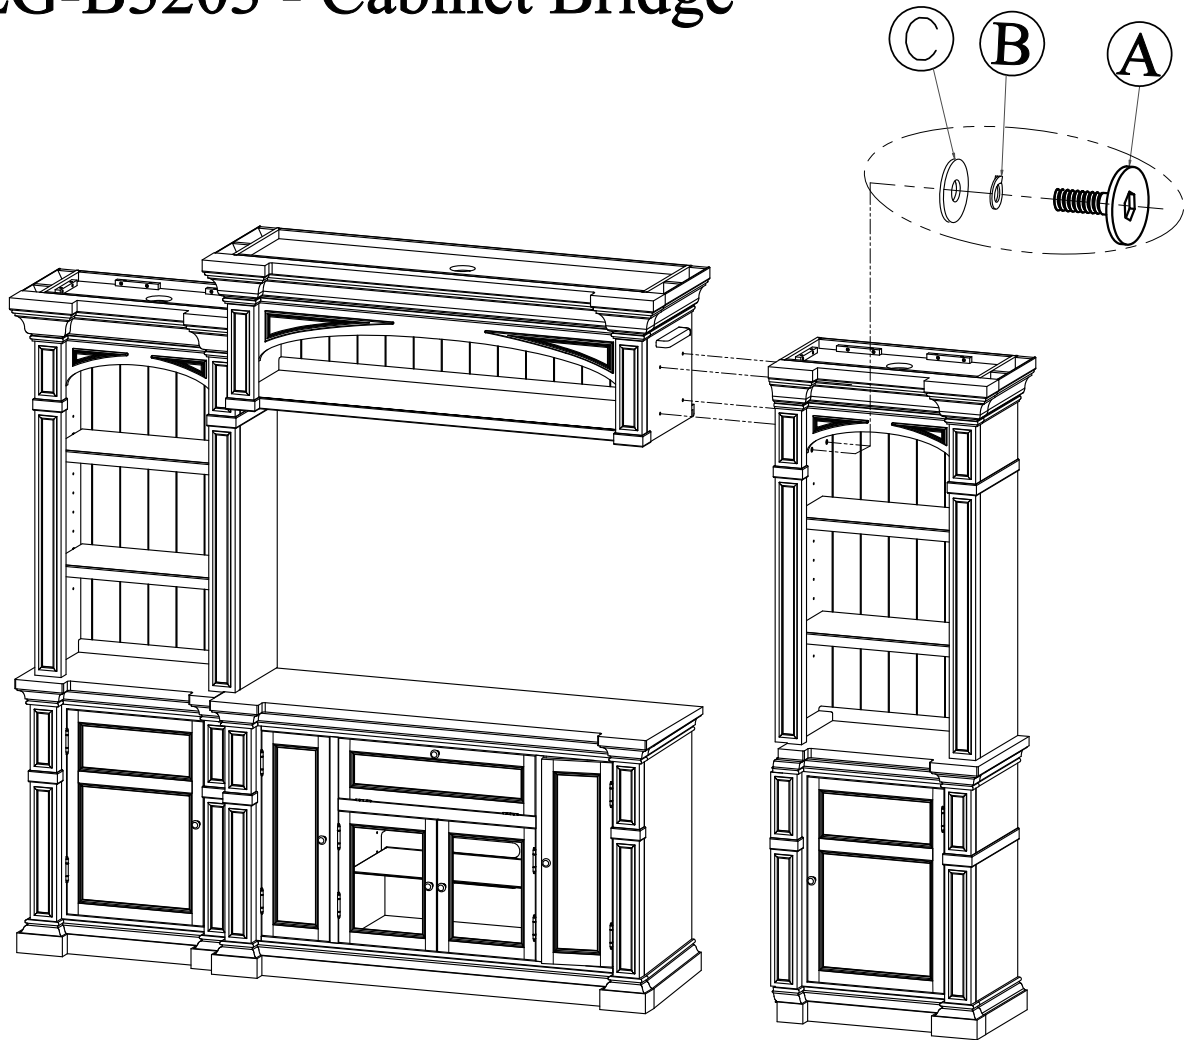

ZG-B3202 - Right Bookcase Pier

ZG-B3203 - Cabinet Bridge



NOTE:

1. Place Piers on their respective side of the console.
2. Attach Cabinet Bridge to piers using flat washers (C), lock washers (B), bolts (A), & Allen wrench (D).

#	PART	DESCRIPTION	QTY
A		Bolt	8
B		Lock Washer	8
C		Flat Washer	8
D		Allen Wrench	1


Berkshire Wall Unit Assembly Instructions

ZG-B1100 - Super 60 TV Console

ZG-B3201 - Left Bookcase Pier

 
 
ZG-B3202 - Right Bookcase Pier

ZG-B3203 - Cabinet Bridge

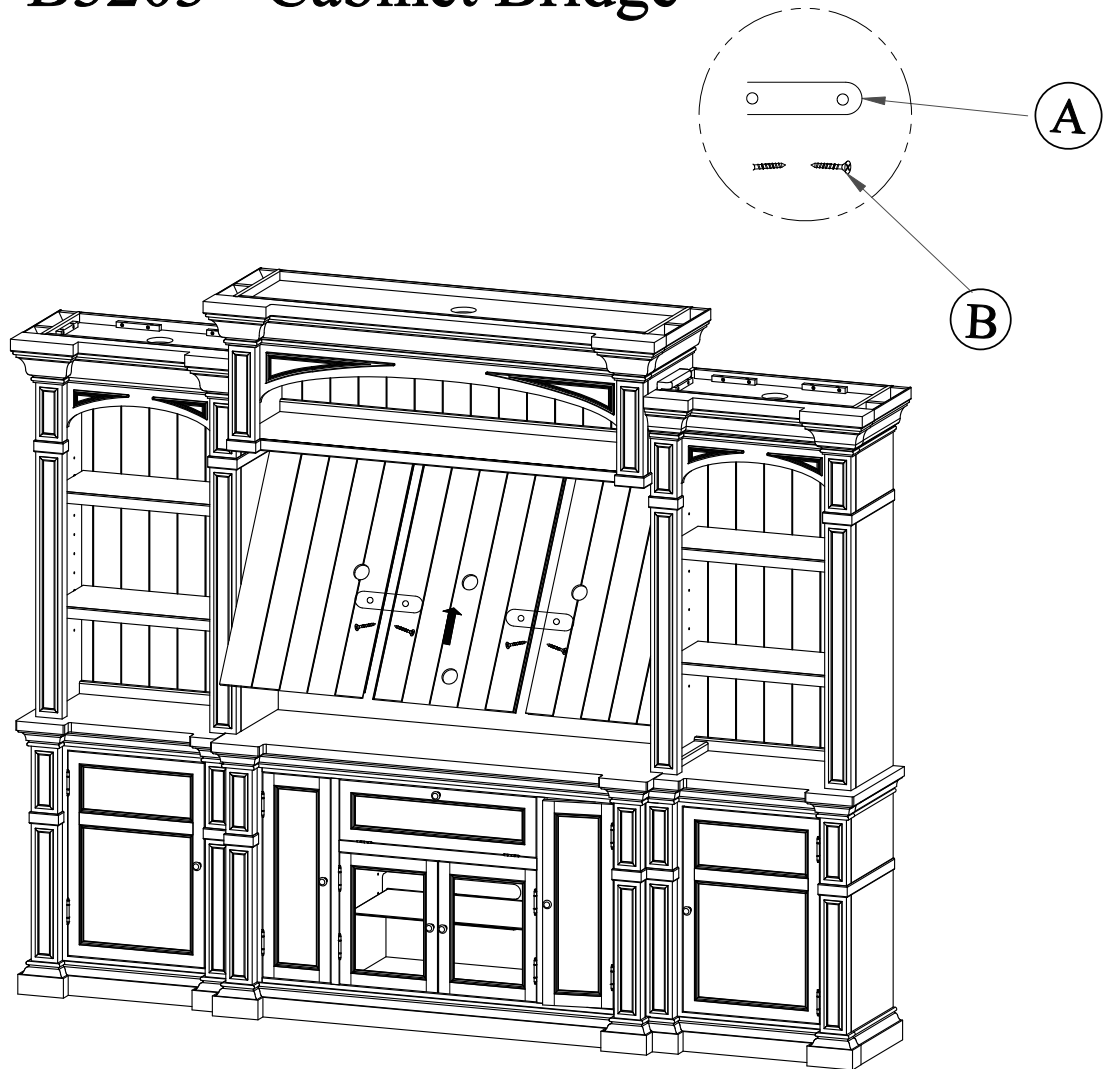


Note:

1. Insert the back panel from the front of the console. Insert the top of the panel into the top railing attached to the rear of the cabinet bridge. Swing the bottom in & place into the railing attached to the rear of the console. Attach the back panels together by placing the bracket (A) over the seam of the back panel and attach with the screws (B). (see diagram)

#	PART	DESCRIPTION	QTY
A		BRACKET	2
B		SCREW	4

Berkshire ZG-B1100 Assembly Instructions

ZG-B1100 - Super 60 TV Console

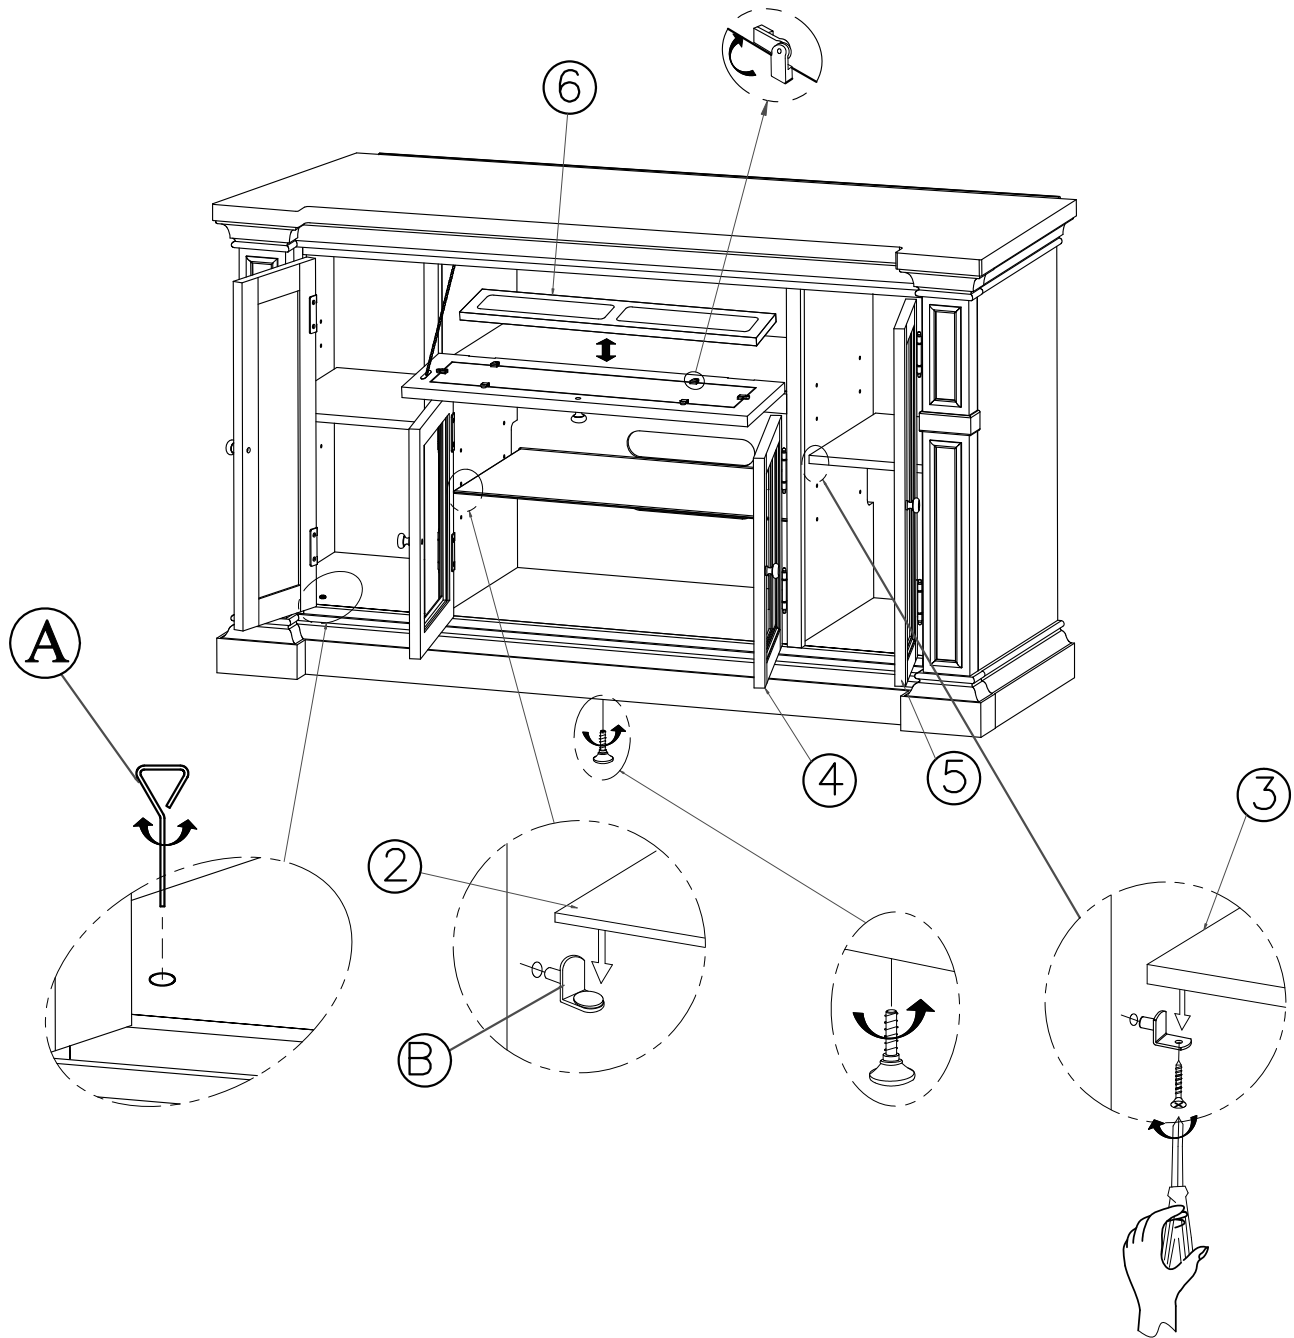


1. Insert the shelf holders into the holes at the desired height. Set glass shelf on top.
2. To replace the wooden panel with the speaker grill (6), twist the clips aside, remove wooden panel & replace with speaker panel. Twist clips back into place. (See Diagram 1)
3. To level the unit, adjust the leveler using the Allen Wrench (A). (See Diagram 2)


 
 


#	PART	DESCRIPTION	QTY
A		ALLEN WRENCH	1
B		SHELF HOLDER	4
2		GLASS SHELF	1
3		WOODEN SHELF	2
4		GLASS DOOR	2
5		WOODEN DOOR	2
6		SPEAKER GRILL	1

Berkshire Wall Unit Assembly Instructions

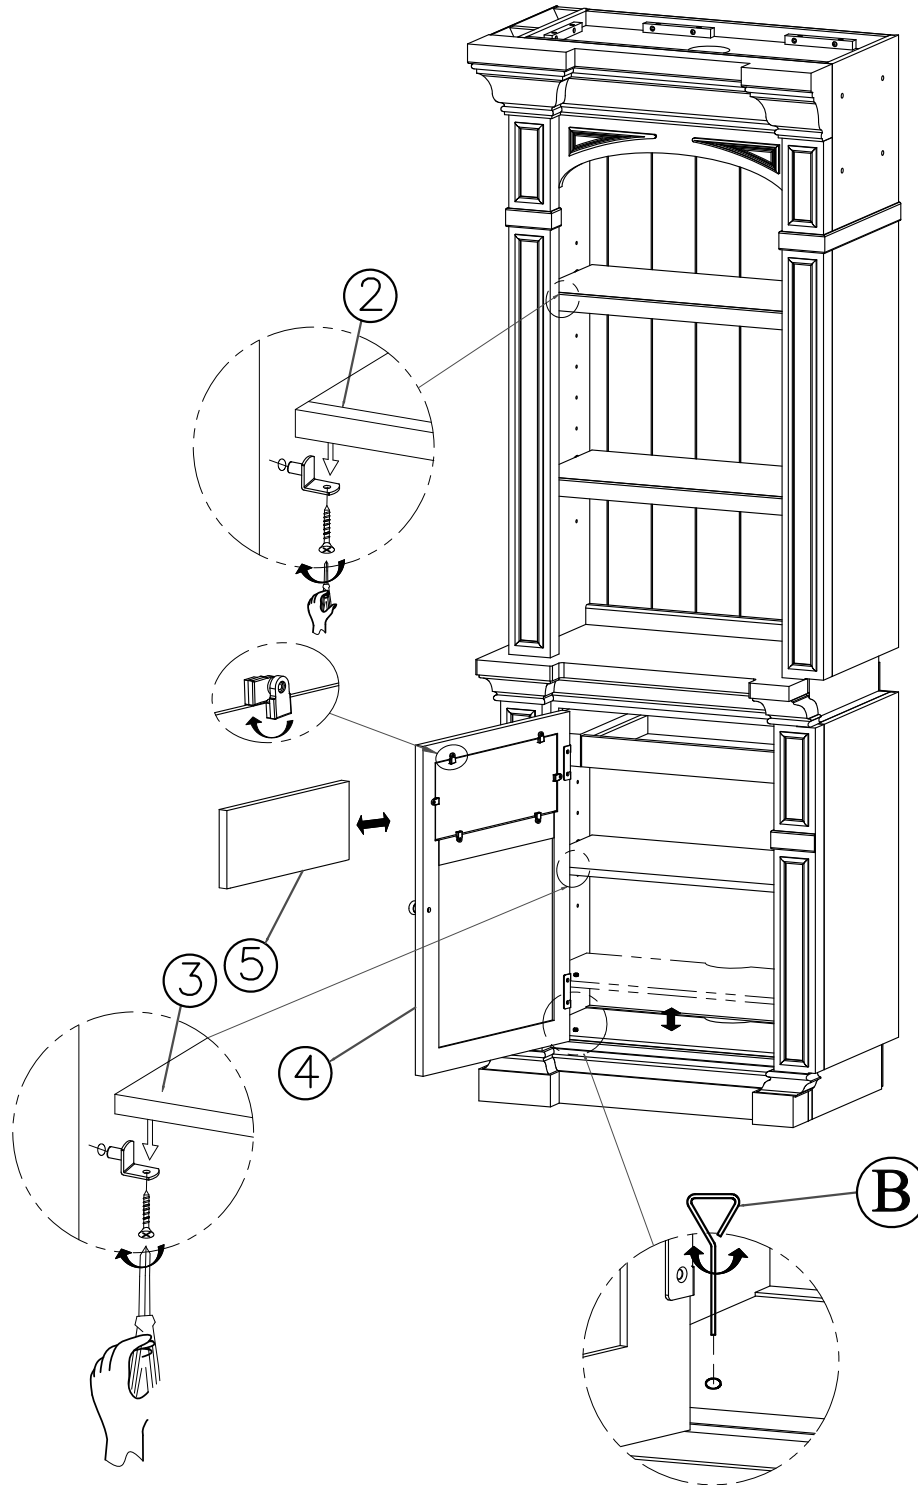ZG-B3201 - Left Bookcase Pier
ZG-B3202 - Right Bookcase Pier



1. The wooden shelves can be adjusted by removing the screws with a Phillip's Screwdriver. (Not Included)
2. To replace the wooden panel with the speaker grill (5), twist the clips aside, remove wooden panel & replace with speaker panel. Twist clips back into place.
3. To level the unit, adjust the leveler using the Allen Wrench (A). (See Diagram)

#	PART	DESCRIPTION	QTY
A		ALLEN WRENCH	1
2		WOODEN SHELVES	2
3		WOODEN SHELF	1
4		WOODEN DOOR	1
5		SPEAKER GRILL	1