
 
 


 


 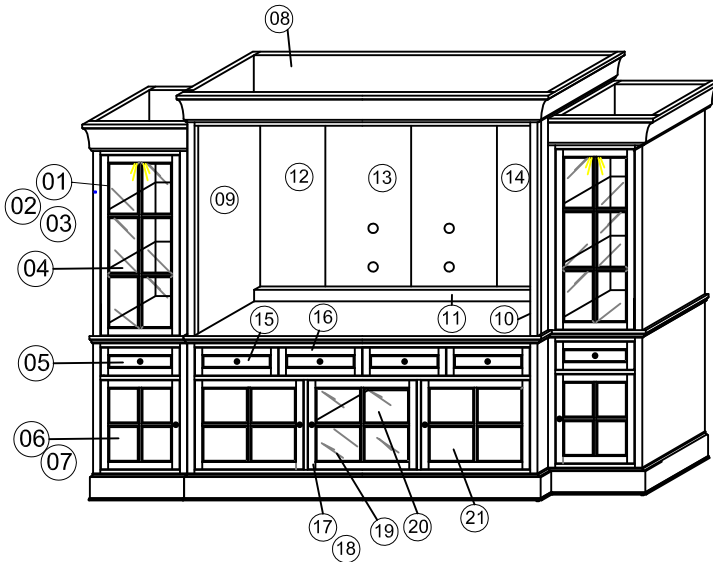





 




 





 
 





 

 




# Bristo Wall PARTS SHEET



- \*ZBRT-1774 Bristol 74" TV Console
- \*ZBRT-2074 Bristol Hutch
- \*ZBRT-3001 Bristol Left Bookcase Pier
- \*ZBRT-3002 Bristol Right Bookcase Pier

NO.	ZBRT-3001/3002
01	 TOP GLASS DOOR
02	 TOP GLASS DOOR FRAME
03	 TOP DOOR GLASS PANEL
04	 GLASS SHELF
05	 DRAWER
06	 WOOD DOOR
07	 BOTTOM PANEL
<b>HARDWARE</b>	
A	 CAN LIGHT
B	 DRAWER GLIDE
C	 ADJUSTABLE LEVELER
D	 SHELF HOLDER
E	 ROLLER CATCH
F	 DOOR CATCH

NO.	ZBRT-2074
08	 CROWN
09	 LEFT SIDE BOX
10	 RIGHT SIDE BOX
11	 BOTTOM BACK RAIL
12	 LEFT SIDE BACKING
13	 LEFT CENTER BACKING
14	 RIGHT SIDE BACKING
<b>HARDWARE</b>	
A	 LOCK WASHER / FLAT WASHER / BOLT
B	 ALLEN WRENCH

NO.	ZBRT-1774
15	 SIDE DRAWER
16	 MIDDLE DRAWER
17	 GLASS DOOR COMPLETE
18	 GLASS DOOR FRAME
19	 DOOR GLASS
20	 GLASS SHELF
21	 SIDE WOOD DOOR
<b>HARDWARE</b>	
A	 DRAWER GLIDE
B	 ADJUSTABLE LEVELER
C	 SHELF HOLDER
D	 ROLLER CATCH
E	 DOOR CATCH
F	 DRAWER HINGE
G	 DRAWER FRONT CATCH